



CONTROLLER INFORMATION



| Control Panel Switch | Options/Function |
|-----------------------------|--|
| "STOP" Button | When pressed, will stop all Aqua Phase wash functions |
| "START" Button | Must be pressed to start any Aqua Phase wash function |
| WASH TIME Selector Switch | Allows you to select the length of wash: "3 MIN" = Three minute wash cycle "5 MIN" = Five minute wash cycle "7 MIN" = Seven minute wash cycle |
| "RUN/DRAIN" Selector Switch | "RUN": Set to "RUN" to wash an item. "DRAIN": Set to "DRAIN" to drain the water in the machine. The water should be drained when you are done washing for the day or if you relocate the machine. In order for the "DRAIN" function to work, the Wash Mode switch must be set to "CLEAN & DISINFECT" or "CLEAN ONLY". |
| WASH MODE Selector Switch | "CLEAN & DISINFECT": When this mode is selected, Aqua Phase will perform a complete wash and rinse for the time specified on the WASH TIME Time Selector Switch. It will then automatically apply disinfectant solution. "CLEAN ONLY": When this mode is selected, Aqua Phase will perform a complete wash and rinse cycle for the length of time specified on the WASH TIME Selector Switch. It will not apply disinfectant. "DISINFECT ONLY": When this mode is selected, Aqua Phase will apply disinfectant solution only. It will not wash or rinse. |

Aqua Phase™ CONTROLLER INFORMATION



Message One Run mode selected.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | R | U | N | M | O | D | E | |
| | | | | | | | | |
| | | | R | e | a | d | y | |

- Doors closed.
- Ready to start.

Message Two Drain mode selected.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | D | R | A | I | N | M | O | D |
| | | | | | | | | |
| | | | R | e | a | d | y | |

- Doors closed.
- Ready to start.

Message Three Machine filling for wash cycle

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | W | A | S | H | C | Y | C | L |
| | | | | | | | | |
| | | | F | i | l | l | i | n |

- Run mode selected.
- Doors closed.
- "Start" button pushed.

Message Four Machine is in Wash Cycle.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | W | A | S | H | C | Y | C | L |
| | | | | | | | | |
| | | | I | n | P | r | o | g |

- Machine done filling for wash cycle.
- Detergent solution automatically injected.
- Wash cycle will be for time selected (3,5, or 7 minutes)

Message Five Machine done with wash cycle.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | | | | | | | | |
| | | | D | r | a | i | n | |
| | | | I | n | P | r | o | g |

- Wash water is being drained.
OR
- Drain mode selected and "Start" button pushed.

Message Six Machine beginning Rinse cycle.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | R | I | N | S | E | C | Y | C |
| | | | | | | | | |
| | | | F | i | l | l | i | n |

- Wash cycle complete
- Wash water drained. Machine is filling with fresh water for Rinse cycle.

Message Seven Machine is in rinse cycle.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | R | I | N | S | E | C | Y | C |
| | | | | | | | | |
| | | | I | n | P | r | o | g |

- Machine done filling for rinse cycle.
- Rinse solution automatically injected. Rinse cycle will be for approximately 1.5 minutes.

Message Eight Disinfectant Application System Running (Option)

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| D | I | S | I | N | F | E | C | T |
| A | P | P | L | I | C | A | T | I |
| | | | | | | | | |
| | | | I | n | - | P | r | o |

- Fresh water mixed with disinfectant solution.
- Item in Wash Chamber sprayed with solution.
 1. "Clean & Disinfect" Selected before wash cycle started. **Wash & Rinse cycle done.**
 2. "Disinfect Only" selected & "Start" button pushed.

Message Nine Machine completed selected operation.

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| A | Q | U | A | P | H | A | S | E |
| | | | C | y | c | l | e | |
| | | | C | o | m | p | l | e |
| | | | O | p | e | n | D | o |

- Front door of Wash Chamber must be opened before next operation can begin.
- Item removed/loaded.
 - Wash Chamber inspected for debris. Safety switches operational.

Message Ten Check Low Level Float

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| W | A | S | H | S | T | O | P | P |
| * | * | * | * | * | * | * | * | * |
| | | | C | h | e | c | k | |
| | | | L | e | v | e | L | |

- **After Wash Cycle, prior to start of the draining of wash water.**
- Is float is free of debris?
 - Is float is operating properly?